

PT-2000 energy pack - Compatibility chart connector tips

	Model Device	model nr. indicated on packaging	Code	Incl in packaging	Available but not included in packaging
1	Mini USB - HTC/Blackberry/Motorola MotorolaV3/A630/A840/A845/C330/C331G/C332G/T193/C331T/C333C/C343/C353T/C350/V810/T193/T22XX/V2200/V300/V400/V500/V505/V525/V551/V600/6510/7510/7520/E310/C650/V180/V188/V325/V220/V3I/A780 also suitable for bluetooth headsets, GPS,...	Mini USB	C-U10	✓	
2	Micro USB Nokia 6500, Motorola V8,...	Micro USB	C-U11	✓	
3	Ipod™ Shuffle type2 For latest Ipod Shuffle	Ipod™ shuffle type 2	C-A12	✓	
4	iPhone™ 2G-3G/Ipod™Classic/Nano For iPhone™, iPod Nano™, iPod Video™, iPod Classic™,...	iPhone™ 2G/3G /Ipod™Classic/Nano	C-A10	✓	
5	Sony-Ericsson K750 K750I/Z520A/W600I/W800/W550/W900/W500W880/	Sony-Ericsson	C-SE10	✓	
6	Sony-Ericsson T28 T28/K500I/P800/K700/K700I/S700I/T2XX/T3XX/T6XX/P900/R320/T29/T39/T39D/R300D/R300IX/R300Z/T60X/T61X/T62U/T68/T68I/Z200/Z500A/Z600/T20/T60/T61/T62/T66/T200/T226/T237/T300/T306/T316/T608/T610/T616/R300/R320SC/R380/R520M/A2218/A2288/P800/Z200/Z500/Z600/T630/T637/S710A/K500I/K700I/Z500A		C-SE11		✓
7	Nokia 8210 6110/5110/6152/6210/6310/6600/5100/7110/7210/7270/7610/3330/3310/3210/8210/8250/8810/8910/8310/6235/6822/2600/3120/6670/3560/3650/7700/3108/6230	Nokia 2	C-N10	✓	
8	Nokia 6101 6010/6102/N70/N90/N80/82XX/83XX/88XX/6200/6230/6600/6800/6111/6100/6120/N72/N73/7360/3250/6030/6680/6280	Nokia 1	C-N11	✓	
9	Nokia Micro USB - 6500 For Nokia 8600, Nokia 5610, MOTO V8,...	Micro USB	C-U11	✓	
10	Samsung D800 SGH-T809/SGH-Z510/SGH-D810/SGH-U600	Samsung 1	C-S10	✓	
11	Samsung A288 SA288/SGH-D410/D415/D418/E315/E316/E317/SGH-R225/R225M/N625/V20X/S30X/SGHN105/Q105/3500/6100/8500SGH-P107/P207/X426/X427/X427M/SGHS300/S307/S308/SGHV200/SGHV205,V206/N625/S307/X427M/P107/C207/E317/P207/X497/D307/D357/D508/D608	Samsung 2	C-S11	✓	
12	Samsung A460				

	SAM SPH-A460/SPH-A500/SPH-540/SPH-N400/ SPH-A600/SPH-N240/A520/A620/VGA-1000/660/ LG1200/ LG6070/LGRD5230/LG2230/SY8100/7300/4920/AUD4050/MAX 8900/8610/8940/8910/AUD8450/8410/8400/8900/9900/QC203 5A/2235/2250/2255/2135(QC1135)/2008/2008A/2027/A760/K Y2035//KY2135/KY7135/KY1135/KY2119/KY2119B/ KY2235/KY2255/KY2235/KY2345/KY3225/K3245/KY7135/KE41 3C/KE414/KX440KE414C/KX413/KY434/KX414/KY424		C-S12		✓
13	Samsung E720 E728/P735/E818/E728/E608		C-S13		✓
14	Samsung G600 M500/G608		C-S14		✓
15	Samsung V680		C-S15		✓
16	Nintendo DS	Nintendo DS	C-NI10	✓	
17	Nintendo GBM		C-NI11		✓
18	Nintendo GBA		C-NI12		✓
19	Sony PSP	PSP	C-SO10	✓	
20	LG KG800 (Chocolate) KG800/U990/KG90/KG800/KG90C incl with S-200 solar panel		C-L10		✓
21	LG 6100 C610/7000/C620/C630/C6500/LG510/7100/7135/LGS110/TM5 10/SP1100/520/TP5250/5200/5220/5300/5400/5410		C-L11		✓
22	LG 510 600/611/110/LG1200/LG510/7100/7135/LGS110/TM510/SP110 0/520/TP5250/5200/5220/5300/5400/5410		C-L12		✓
23	LG8080 8080/8180/8188/8280/6760/8108/6260/6660/6360/8380		C-L13		✓
24	LG 6000 AUD CDM-8900/LG3000		C-L13		✓
25	Motorola V8 - Micro USB For Motorola V8 / Nokia 8600 / Nokia 5610 /...	Micro USB	C-U11	✓	
26	Motorola V66 V66/V60/1100/1500/V70/V200/P280/270C/V60C/V60I/T721/T7 22/V120T/V120C/V120X/V120E/V60I/2800/V500/V600/V525/V 300/A835/A920/V80/MPx220/TP280/V535/V550/V60/V620/CD 920/CD30/A100/A830/A925/C975/C980/E1000/E398/E550/MPx 220/ROKRE1/T720i/V1050/V360/V545/ V547/V635/V80/V975/V980/130/135/150/55/180/185/190/185 9N120/250C/C331/C332/C333/V65P/V270/I80/V60I/I35/I58/I6 0/I95/I90/I85/i50/V120/250/290/V20/I55/MOT3G/V400/V303/ V525/C343/T280/341/C353/T730/V710		C-M11		✓
27	Motorola V998 CD928/L2000/V3688/CD928/L2000/V3688/V2088/A6188/P768 9/LF2000/M388/V3620/C289/T189/v8088/308/3282088/2288/ A6188/P7689/v8088/LF2000/V3688		C-M12		✓
28	Motorola A768/760		C-M13		✓
29	Motorola T191				

	T190/C300/C350/E380/V290/C200/C201/C266/C333/C336/C350/C450/C550/T180/T192/T2288/V150/E398/C113		C-M14		✓
30	Motorola i730 V205/I205/LXU/I305/I530/I733/Nextel I730/I830/I850/I860/I836/I710/I325/I285/I215/I736/I830		C-M15		✓
31	Motorola V3 - Mini USB - 5 pin V3/A630/A840/A845/C330/C331G/C332G/T193/C331T/C333C/C343/C353T/C350/V810/T193/T22XX/V2200/V300/V400/V500/V505/V525/V551/V600/6510/7510/7520/E310/C650/V180/V188/V325/V220/V3I/A780	Mini USB	C-U10	✓	
32	Panasonic GD92 GD92/GD52/93/75/95/TX310/320		C-PA10		✓
33	Palm One 600/650/T5		C-P10		✓
34	Alcatel OT511 OT511/OT310/OT535/OT756/OT300/OT301/OT302/OT500/OT221/OT700		C-AL10		✓
35	Siemens A31		C-SI10		✓
36	Siemens C55 C55/S55/SL55/M55/A55/A56/C56/DT56/S56/C60/A60/C62/MC60/S57/2128/CF62/CFX65/CX65/CX70/C62/CF62/C65/M55/S55/SL55/SX1		C-SI11		✓
37	Siemens C25 C25/C35/C45/3508/3518/3568/S3588/6688/S25/S2588/SL45/1118/A40/A35/A36/A50/SL42/SL45/ME45/S45/2118/C2588/6688/2988/6618		C-SI12		✓
38	Philips 929 SAVVY/1288/929/939/969/TCD988/TCD218/FISO8020/620		C-PH10		✓
39	Sanyo 4900 EL-4920,RL-4930,SCP-200,SCP-2300,SCP-2400,SCP-3000,SCP-3100,SCP-350,SCP-4000,SCP-4500,SCP-4700,SCP-4900,SCP-5000,SCP-5150,SCP-5300,SCP-5400/RL2500/SCP-5500/VM4500/SCP-6000/SCP-6200/SCP-6400/SCP7200/RL2000/SCP7300/RL7300/SCP-8100/SCP-8200/PM-8200/VI-2300/4600/8100/5300/7200/5000/5150/6000/6200/C304/RL2000/2500/5400/5500/7300/MM7500/MM-5600/MM-7400/MM-7500/MM-8300/MM-9000		C-SA10		✓
40	Sagem 918 900/922/920/930/939/MC940/959/3000/X6/X7/X2/MC9X/3020/3040/MYX-5/SG341I/Gradiente GX--2		C-SG10		✓