

Important notice regarding the S-200 Solar Panel

The S-200 cannot guarantee a 100 % stable output current due to changes in weather conditions (intensity of the sun, clouds, shadow...). Some electronic devices could be sensitive to these fluctuations in electric current and might not charge properly at all times. This will not harm your S-200 or electronic device.

S-200 Outdoor solar panel - Compatibility chart connector tips

	Model Device	model nr. indicated on packaging	Code	Incl in packaging	Available but not included in packaging
1	Mini USB - HTC/Blackberry/Motorola MotorolaV3/A630/A840/A845/C330/C331G/C332G/T193/C331T/C333C/C343/C353T/C350/V810/T193/T22XX/V2200/V300/V400/V500/V505/V525/V551/V600/6510/7510/7520/E310/C650/V180/V188/V325/V220/V3I/A780 also suitable for bluetooth headsets, GPS,...	Mini USB	C-U10	✓	
2	Micro USB Nokia 6500, Motorola V8,...	Micro USB	C-U11	✓	
3	Ipod™ Shuffle type2 For latest Ipod Shuffle	Ipod™ shuffle type 2	C-A12	✓	
4	Sony-Ericsson K750 K750I/Z520A/W600I/W800/W550/W900/W500W880/	Sony-Ericsson	C-SE10	✓	
5	Sony-Ericsson T28 T28/K500I/P800/K700/K700I/S700I/T2XX/T3XX/T6XX/P900/R320/T29/T39/T39D/R300D/R300IX/R300Z/T60X/T61X/T62U/T68/T68I/Z200/Z500A/Z600/T20/T60/T61/T62/T66/T200/T226/T237/T300/T306/T316/T608/T610/T616/R300/R320SC/R380/R520M/A2218/A2288/P800/Z200/Z500/Z600/T630/T637/S710A/K500I/K700I/Z500A		C-SE11		✓
6	Nokia 8210 6110/5110/6152/6210/6310/6600/5100/7110/7210/7270/7610/3330/3310/3210/8210/8250/8810/8910/8310/6235/6822/2600/3120/6670/3560/3650/7700/3108/6230	Nokia 2	C-N10	✓	
7	Nokia 6101 6010/6102/N70/N90/N80/82XX/83XX/88XX/6200/6230/6600/6800/6111/6100/6120/N72/N73/7360/3250/6030/6680/6280	Nokia 1	C-N11	✓	
8	Nokia Micro USB - 6500 For Nokia 8600, Nokia 5610, Motorola V8,...	Micro USB	C-U11	✓	
9	Samsung D800 SGH-T809/SGH-Z510/SGH-D810/SGH-U600	Samsung 1	C-S10	✓	
10	Samsung A288				

	SA288/SGH-D410/D415/D418/E315/E316/E317/SGH-R225/R225M/N625/V20X/S30X/SGHN105/Q105/3500/6100/8500SGH-P107/P207/X426/X427/X427M/SGHS300/S307/S308/SGHV200/SGHV205,V206/N625/S307/X427M/P107/C207/E317/P207/X497/D307/D357/D508/D608	Samsung 2	C-S11	✓	
11	Samsung A460 SAM SPH-A460/SPH-A500/SPH-540/SPH-N400/ SPH-A600/SPH-N240/A520/A620/VGA-1000/660/ LG1200/LG6070/LGRD5230/LG2230/SY8100/7300/4920/AUD4050/MAX8900/8610/8940/8910/AUD8450/8410/8400/8900/9900/QC2035A/2235/2250/2255/2135(QC1135)/2008/2008A/2027/A760/KY2035//KY2135/KY7135/KY1135/KY2119/KY2119B/KY2235/KY2255/KY2235/KY2345/KY3225/K3245/KY7135/KE413C/KE414/KX440KE414C/KX413/KY434/KX414/KY424		C-S12		✓
12	Samsung E720 E728/P735/E818/E728/E608		C-S13		✓
13	Samsung G600 M500/G608		C-S14		✓
14	Samsung V680		C-S15		✓
15	Nintendo DS	Nintendo DS	C-NI10	✓	
16	Nintendo GBM		C-NI11		✓
17	Nintendo GBA		C-NI12		✓
18	Sony PSP	PSP	C-SO10	✓	
19	LG KG800 (Chocolate) KG800/U990/KG90/KG800/KG90C		C-L10	✓	
20	LG 6100 C610/7000/C620/C630/C6500/LG510/7100/7135/LGS110/TM510/SP1100/520/TP5250/5200/5220/5300/5400/5410		C-L11		✓
21	LG 510 600/611/110/LG1200/LG510/7100/7135/LGS110/TM510/SP1100/520/TP5250/5200/5220/5300/5400/5410		C-L12		✓
22	LG8080 8080/8180/8188/8280/6760/8108/6260/6660/6360/8380		C-L13		✓
23	LG 6000 AUD CDM-8900/LG3000		C-L13		✓
24	Motorola V8 - Micro USB For Motorola V8 / Nokia 8600 / Nokia 5610 /...	Micro USB	C-U11	✓	
25	Motorola V66				

	V66/V60/1100/1500/V70/V200/P280/270C/V60C/V60I/T721/T722/V120T/V120C/V120X/V120E/V60I/2800/V500/V600/V525/V300/A835/A920/V80/MPx220/TP280/V535/V550/V60/V620/CD920/CD30/A100/A830/A925/C975/C980/E1000/E398/E550/MPx220/ROKRE1/T720i/V1050/V360/V545/V547/V635/V80/V975/V980/130/135/150/55/180/185/190/1859N120/250C/C331/C332/C333/V65P/V270/I80/V60I/I35/I58/I60/I95/I90/I85/i50/V120/250/290/V20/I55/MOT3G/V400/V303/V525/C343/T280/341/C353/T730/V710		C-M11		✓
26	Motorola V998 CD928/L2000/V3688/CD928/L2000/V3688/V2088/A6188/P7689/LF2000/M388/V3620/C289/T189/v8088/308/3282088/2288/A6188/P7689/v8088/LF2000/V3688		C-M12		✓
27	Motorola A768/760		C-M13		✓
28	Motorola T191 T190/C300/C350/E380/V290/C200/C201/C266/C333/C336/C350/C450/C550/T180/T192/T2288/V150/E398/C113		C-M14		✓
29	Motorola i730 V205/I205/LXU/I305/I530/I733/Nextel I730/I830/I850/I860/I836/I710/I325/I285/I215/I736/I830		C-M15		✓
30	Motorola V3 - Mini USB - 5 pin V3/A630/A840/A845/C330/C331G/C332G/T193/C331T/C333C/C343/C353T/C350/V810/T193/T22XX/V2200/V300/V400/V500/V505/V525/V551/V600/6510/7510/7520/E310/C650/V180/V188/V325/V220/V3I/A780	Mini USB	C-U10	✓	
31	Panasonic GD92 GD92/GD52/93/75/95/TX310/320		C-PA10		✓
32	Palm One 600/650/T5		C-P10		✓
33	Alcatel OT511 OT511/OT310/OT535/OT756/OT300/OT301/OT302/OT500/OT221/OT700		C-AL10		✓
34	Siemens A31		C-SI10		✓
35	Siemens C55 C55/S55/SL55/M55/A55/A56/C56/DT56/S56/C60/A60/C62/MC60/S57/2128/CF62/CFX65/CX65/CX70/C62/CF62/C65/M55/S55/SL55/SX1		C-SI11		✓
36	Siemens C25 C25/C35/C45/3508/3518/3568/S3588/6688/S25/S2588/SL45/1118/A40/A35/A36/A50/SL42/SL45/ME45/S45/2118/C2588/6688/2988/6618		C-SI12		✓
37	Philips 929 SAVVY/1288/929/939/969/TCD988/TCD218/FISO8020/620		C-PH10		✓
38	Sanyo 4900				

	EL-4920,RL-4930,SCP-200,SCP-2300,SCP-2400,SCP-3000,SCP-3100,SCP-350,SCP-4000,SCP-4500,SCP-4700,SCP-4900,SCP-5000,SCP-5150,SCP-5300,SCP-5400/RL2500/SCP-5500/VM4500/SCP-6000/SCP-6200/SCP-6400/SCP7200/RL2000/SCP7300/RL7300/SCP-8100/SCP-8200/PM-8200/VI-2300/4600/8100/5300/7200/5000/5150/6000/6200/C304/RL2000/2500/5400/5500/7300/MM7500/MM-5600/MM-7400/MM-7500/MM-8300/MM-9000		C-SA10		✓
39	Sagem 918 900/922/920/930/939/MC940/959/3000/X6/X7/X2/MC9X/3020/3040/MYX-5/SG341I/Gradiente GX--2		C-SG10		✓